 


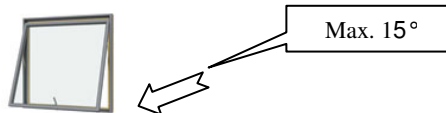

## SGG Climaplus<sup>®</sup> Screen - General guidelines

- Double/triple glazed windows with integrated blinds should be treated with the utmost care through all stages, so that the glass product is not damaged.
- The most critical phases are listed below, and it is important that everyone who works with this product in these phases is aware about the guidelines, and act in accordance therewith.
- Always request the necessary installation and mounting instructions, in order to avoid mistakes and accidents. Failure to meet the following guidelines may lead to cancellation of the warranty on the glass product.

<b>TRANSPORT</b>	<ul style="list-style-type: none"> <li>▪ The integrated blind unit must always be transported vertically with the blind in a horizontal position.</li> <li>▪ Blinds which can be raised / lowered must always be raised during transport.</li> </ul>
<b>RECEPTION</b>	<ul style="list-style-type: none"> <li>▪ The risk and responsibility of the goods passes to the buyer when unloading, and the buyer is therefore obligated to verify delivered goods for transport damage immediately upon receipt. Notification of transport damage, or similar, has to be done to the transport company before leaving.</li> <li>▪ Notification of other defects must be forwarded within 3 days after reception.</li> </ul>
<b>STORAGE</b>	<ul style="list-style-type: none"> <li>▪ Double/triple glazed windows must be kept dry, and protected from the sun.</li> <li>▪ The glass unit must be stored on the edge, on a flat ground slope approx. 7°, with the blind at the top.</li> <li>▪ The glass unit has to be protected from direct contact with the wall, using a soft layer mounted on a 10 cm. wide wooden board.</li> <li>▪ Fastening Tape must be loosened / removed so the glass are not in tense.</li> <li>▪ In order to avoid scratches and edge damages, glass units has to be moved individually.</li> <li>▪ Throughout the construction period the enclosed control components and power connections points must be protected against shock, construction dirt, solvents, acids and other chemicals, dirty water and sharp objects.</li> <li>▪ If stored for a longer period, the blind must immediately be lowered and the slats must be in horizontal position.</li> </ul>
<b>MONTAGE</b>	<ul style="list-style-type: none"> <li>▪ The manual for glazing, developed by <a href="http://www.glasindustrien.dk">www.glasindustrien.dk</a>, must always be respected when mounting.</li> <li>▪ When a blind with slats has been mounted, the blind must immediately be lowered and the slats must be in horizontal position.</li> <li>▪ Blinds with an external manual or motorized operation management must <u>not</u> be installed in environments with high humidity. Moisture penetrates the operation management and damages the product.</li> </ul>
<b>FINAL TEST</b>	<ul style="list-style-type: none"> <li>▪ Always check that the power connections and control components are correctly installed before the installation is completed.</li> <li>▪ Power supply, power coupling and motor control, in blinds with integrated motor, must be installed and tested by a professional.</li> <li>▪ Always test the functions on each end every blind after mounting.</li> </ul>
<b>SPECIAL USE</b>	<ul style="list-style-type: none"> <li>▪ Vertical mounted blinds may only be operated when they are in a vertical position.</li> <li>▪ Horizontal opening frames / top-down windows may max. tilt 15° from a vertical position when the blind is lowered.</li> </ul> <div style="text-align: right; margin-top: 10px;">  </div>